

INSTALLATION INSTRUCTION


3 PIECES KIT (SERIE B3100)

Before starting installation, you should always:

- a) Verify if your order is complete and that there is no freight damages.
- b) Be careful to always keep track of opening identification when applicable.
- c) Always validate that door swing is correct before starting jambs installation.
- d) Have wood backing around the opening (5/8" min).


Rough opening specifications:

Frame the door opening 2 inches more than door size. (Ex: 38" x 82" for an 36" x 80" door)

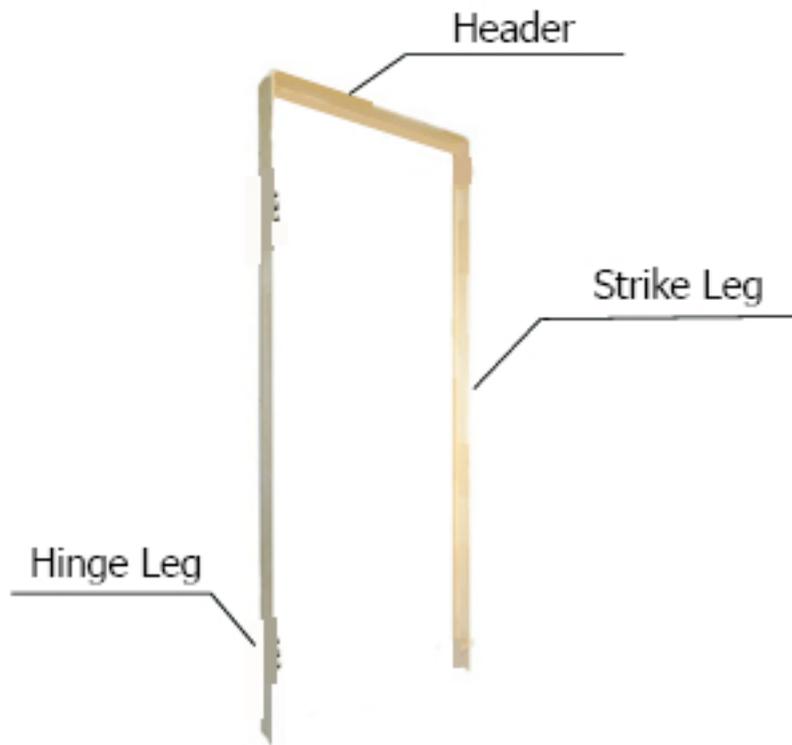

9200, 25e Avenue
Saint-Georges, Beauce
Quebec, Canada
G6A 1L6

Tel : (418) 228-4822
(800) 463-1648
Fax : (418) 228-4884

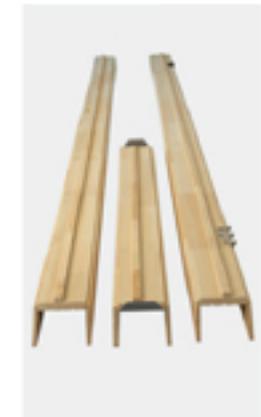

N.B Casing included and installed.

Step 1.

Install jamb header temporary in the opening.



Step 2.

Put temporary in place the 2 jamb legs.



Step 3.

Center the jambs in the rough opening, level the hinges leg and fix it to the stud.




Step 4.

Put the door in place on hinges side and close it into the jamb.



Step 5.

Fix the jamb header by keeping an equal 1/8" between the top of the door and header.

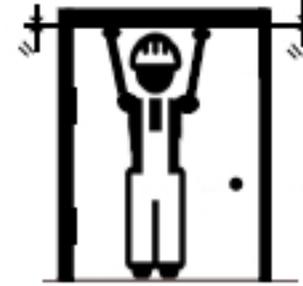

Step 6.

Fix the strike leg side by keeping an equal 1/8" between the door stile and the jamb.

